



StableComfort Patch Kit Instructions

Included in your patch kit:

- One cover slightly larger than your tear – it is marked “A”
- One cover 2” longer & wider than cover A – it is marked “B”
- One bottle of black silicone adhesive

Remember to adhere only fabric/felt side to fabric/felt side for every bond.

Instructions:

Step #1 – Clean area around hole/tear as best you can.

Step #2 – Put on a pair of gloves.

Step #3 – Place cover “A” on top of the hole/tear and cut into the original cover around all four sides. Be careful to cut only the top cover and not the mattress below. (see attached photo for reference)

Step #4 – Remove torn piece of top cover.

Step #5 – Take the larger piece of cover (the one marked “B”) and turn it upside-down (fabric/felt side up) and put it through the hole. Make sure the piece is centred with the hole. (see attached photo for reference)

Step #6 – Use the Black Silicone Adhesive Sealant and squeeze a generous amount between the installed cover and the cover “B”. The bond is formed between the fabric/felt sides of each cover.

Step #7 – Place something heavy such as a brick over this first part of the patch for about an hour or until the adhesive starts to dry to make sure you get a good bond.

Step #8 – You now have a good base to adhere the patch to (cover “A”). Apply a generous amount of adhesive to the fabric/felt side of cover “B” that is showing.


Step #9 – Then place cover “A” cut-out on top, fabric/felt side down. You should now have a nice flush patch. (see attached photo for reference)

Step #10 – Use the adhesive and fill in any gaps in the patch and place the brick over again. Let dry for 24 hours prior to using the stall.


StableComfort™

The Ultimate in Stall Flooring

Step 3

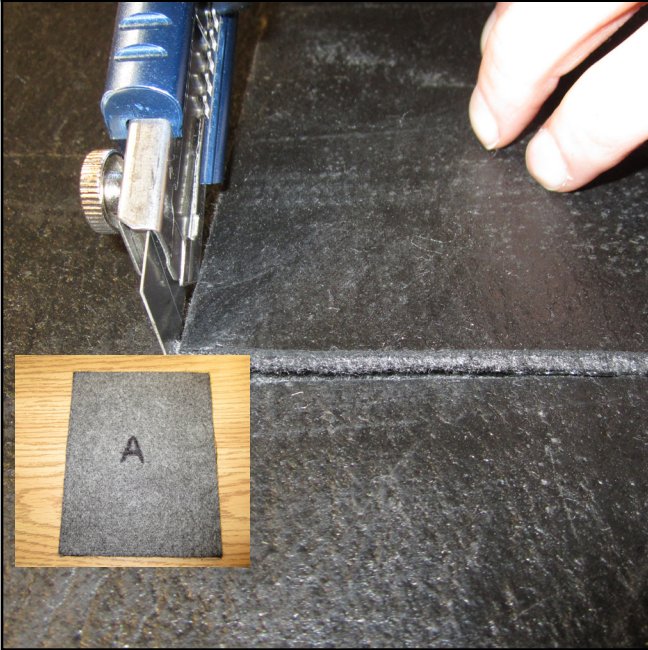

Step 5

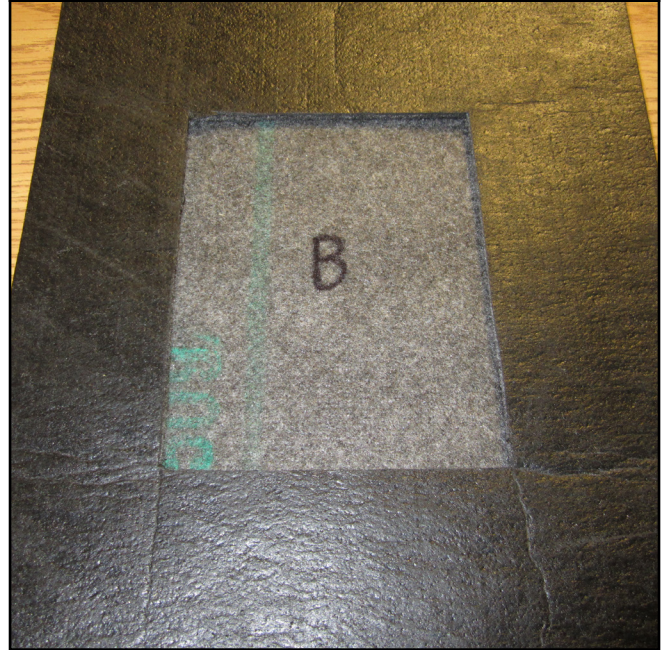

Step 9

