


# ROCKINGTON INSTRUCTIONS

## Front Wall Assembly

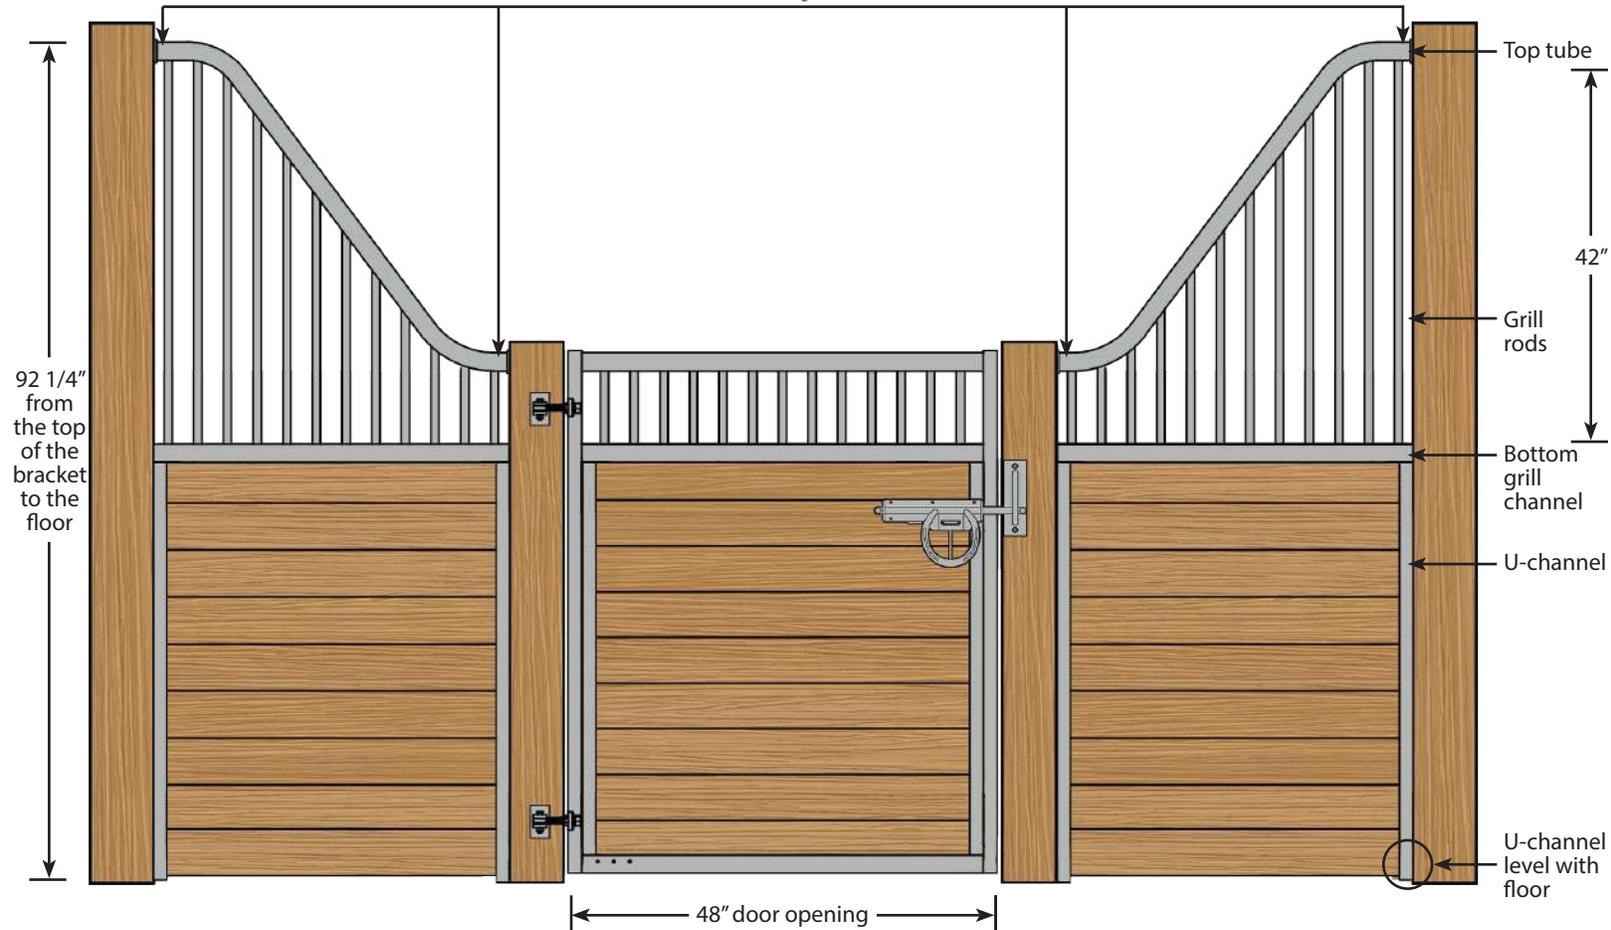


1. a) Install the 46" U-channels on the corner and door posts with the screws provided (channels under grillwork).  
b) U-channels should be set back 1" from the front face of the posts.  
c) The U-channels should be level with the floor.
2. Cut all necessary lumber to a length 1/4" to 3/8" less than the distance measured between the inside faces of the U-channel.
3. Installing the lumber in the U-channels:  
a) Slide the first board down to the bottom of the U-channel ensuring that it is level (pressure treated lumber can be used for the bottom of the stall wall).  
b) Firmly secure the bottom board with the screws provided before installing the remaining boards.
4. Install all remaining boards ensuring that they come to a height of 1 1/8" above the top of the U-channels. It may be required to rip cut a board to achieve the correct height.
5. Slide the grill brackets into the top of the grill work. Lift the grillwork into place on top of the U-channel wall of wood. The grill should sit down on the wood and be on top of the outside 46" U-channels.
6. Level the grill work horizontally and vertically. The top grill brackets are to be slid out to the wood or steel post and screwed into place.
7. Finish screwing in the balance of the screws.
8. Use the step 9 description from the instructions.

# ROCKINGTON INSTRUCTIONS

## Adjustable Hinge Instructions

Part # 357-604

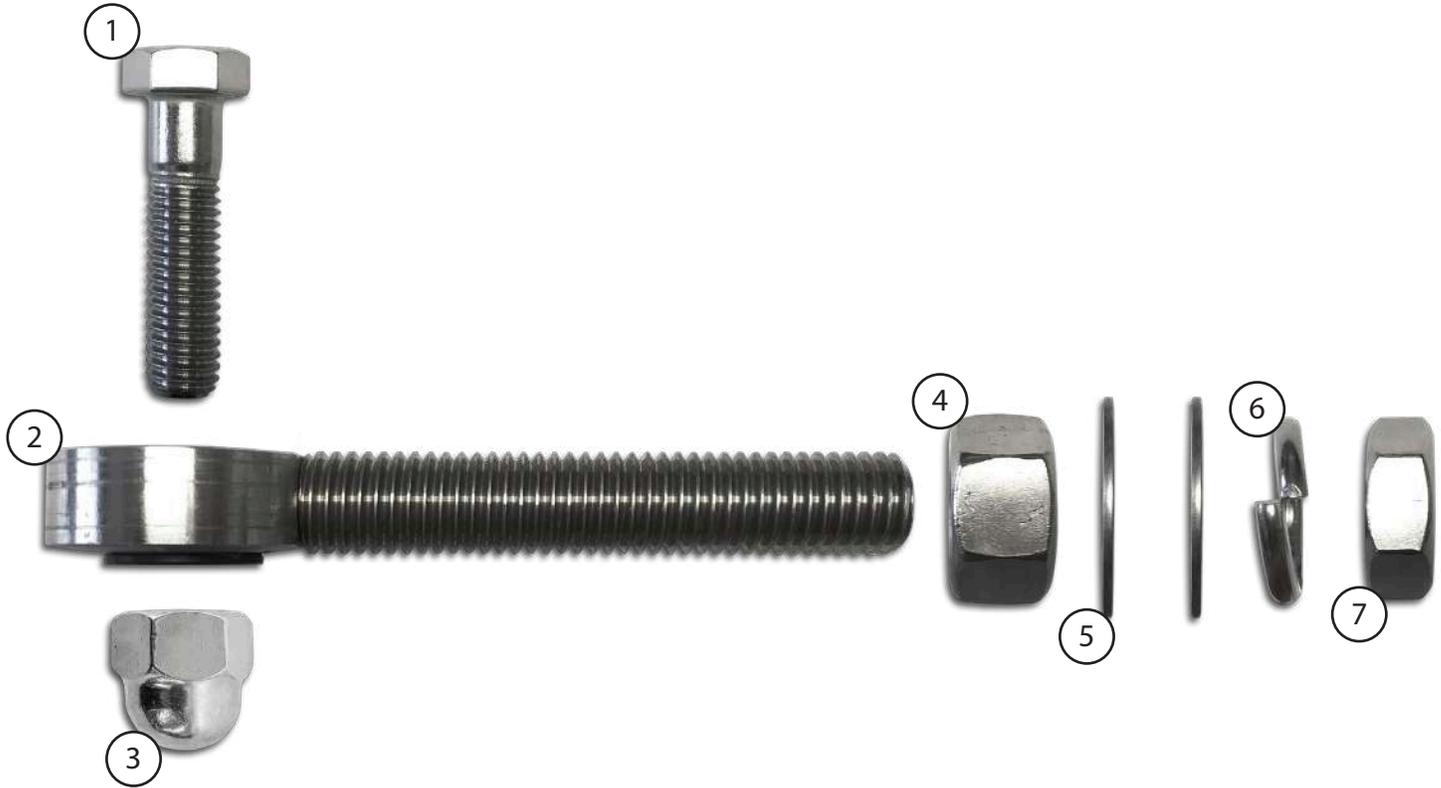


- ① **Part # 02-2128 (x2)**  
*Hex Bolt 1/2" x 2" Stainless Steel*
- ② **Part # 02-HA-020-W-AB (x2)**  
*Eyebolt Loop Weldment for Adjustable Hinge w/Bushing Thread*
- ③ **Part # 02-2242 (x2)**  
*Nut 1/2" Nylock Stainless Steel*
- ④ **Part # 02-2254 (x2)**  
*Nut 5/8" Jam Stainless Steel*
- ⑤ **Part # 02-2229 (x4)**  
*Washer 5/8" Stainless 1 1/2" OD*
- ⑥ **Part # 02-2332 (x2)**  
*Washer 5/8" Lock Stainless Steel*
- ⑦ **Part # 02-2252 (x2)**  
*Nut 5/8" Stainless Steel*

# ROCKINGTON INSTRUCTIONS

## Plunger Latch Instructions

Part # 357-600

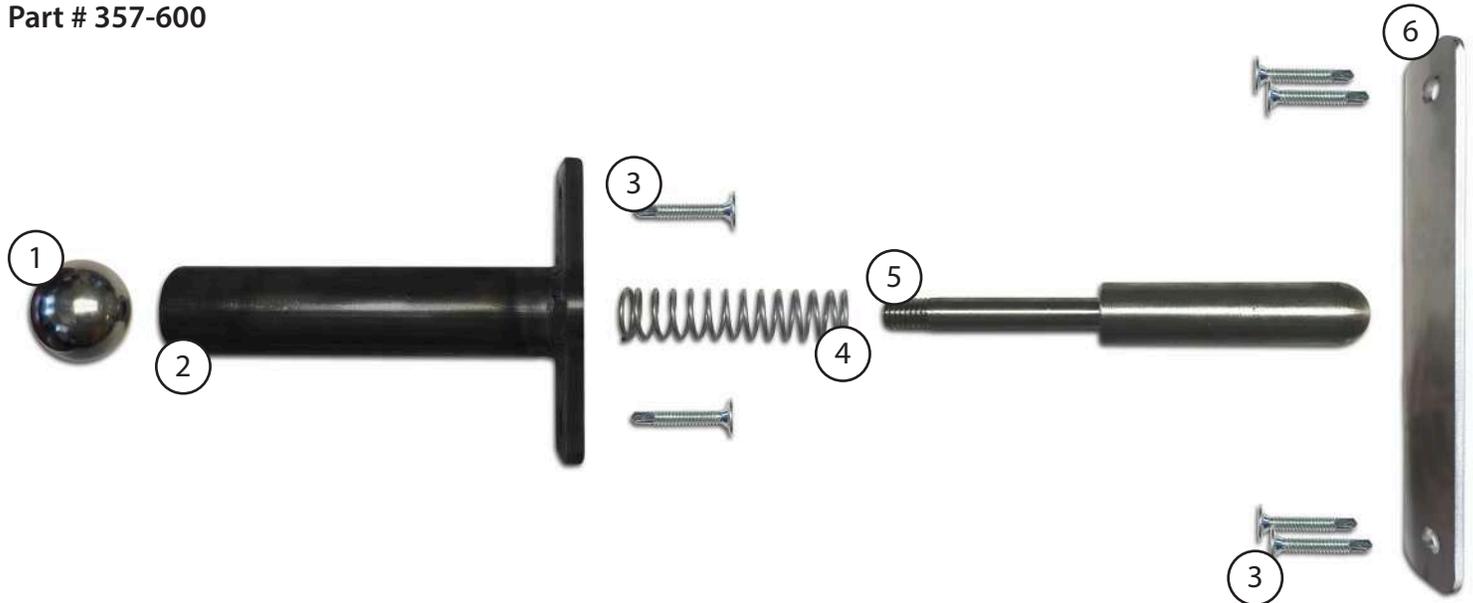

① **Part # 03-20641**  
*Custom Ball Knobs*

② **Part # 03-2065**  
*Plunger Latch Sleeve*

③ **Part # 02-2023 (x6)**  
*Screw Tek # 12 x 1 1/4" PanHead Stainless*

④ **Part # 03-2064**  
*Plunger Latch Compression Spring (2-pack)*

⑤ **Part # 03-2063**  
*Plunger Latch Pin Stainless*

⑥ **Part # 03-2706**  
*Door Striker Plate Stainless 4 1/2" Post*

Once you have adjusted all of the stalls and you are sure you have the balls and the pin in the right spot apply Loctite so that the ball knobs will not spin off.

## Horseshoe Latch Instructions

Part # 364-HLH (Galv), 365-HLH (Painted)

Install the latch either just below the grill work section with six screws, or if using the decorative flanges install in the middle of the flange.

With the door in the closed position, install the catch.

Open the horseshoe latch, position the catch 1/8" inside of the hook on the horseshoe latch.

Holding the catch in place open and close the horseshoe latch to make sure that it freely moves back and forth. Use either lag bolts for wood posts or self-drilling screws for steel posts to fasten the catch.



# ROCKINGTON INSTRUCTIONS

## Partition Installation

### Solid Partition

Identify the materials: 2x 94.5" U-channels, 2x 94.5" wall braces, wall capping (optional)

1. Centre the U-channel on the front post and screw into place using the screws provided.
2. Square up the stall for the back U-channel measure from the end cap to the front U-channel and do the same measurement on the back wall. Stall walls should be parallel to an end or middle wall.
3. Installing the lumber in the U-channels:
  - a) Slide the first board down the U-channels all the way to the floor and make sure it is level.
  - b) Make sure wood is level and screw into place. Stack wood on top making sure to bang boards together and continue to check level.
4. Install optional wall capping on top of the wall (optional).
5. Install the wall braces on each side of the wall.



### Grilled Partition

Identify the materials: 2x 46" U-channels, 2x 46" wall braces, 1x grill work section, 2x grill brackets

1. Complete all solid partition steps using the 46" U-channels (excluding steps 4-5).
2. Install grill brackets into the end of the top of the grill.
3. Lift the grill into place over the top of the wood wall.
4. Level the grill work horizontally and vertically.
5. Slide the grill brackets out to meet the wall and screw into place.
6. Install the wall braces on each side of the wall.



### Privacy Partition

Identify the materials: 2x 46" U-channels, 2x 46" wall braces, 1x grill work section, 2x grill brackets

1. Complete all solid partition steps using the 46" U-channels (excluding steps 4-5).
2. Install grill brackets into the end of the top of the grill.
3. Lift the grill into place over the top of the wood wall.
4. Level the grill work horizontally and vertically.
5. Slide the grill bracket out to meet the wall and screw into place. Attach the U-channel to the other end of the solid part of the grill.
6. Measure and cut the wood for the privacy wall. Slide the wood in to full up the opening. The last board will need the tongue ripped off the board for it to be installed in place.
7. Install the wall braces on each side of the wall.

